

Quick guide

Before using your dishwasher for the first time

Ensure that the electrical and water connections comply with the installation instructions, then:

 
 
 
- 1 Set the water softener according to the hardness of the water in your area following the information given in the instruction book.
- 2 Pour 1 litre of water inside the salt container and then fill with special salt.
- 3 Clean any trace of salt on the screw thread or on the gasket and then screw the cap on tightly turning it clockwise until it stops with a click.

Only use only special salt intended for dishwashers. Never fill the salt container with different types of salt (e.g. cooking salt) or detergent: this would damage the water softener.

After filling the salt container with special salt, run a washing programme. This will wash away salt water and any salt crystals that have been spilt.



- 4 Fill the rinse aid dispenser.
Only use branded rinse aid for dishwashers.
Ensure that the lid is closed after every refill.

Never fill the rinse aid container with any another substance (e.g. concentrated vinegar) or dishwasher cleaning agent. This would damage the appliance.

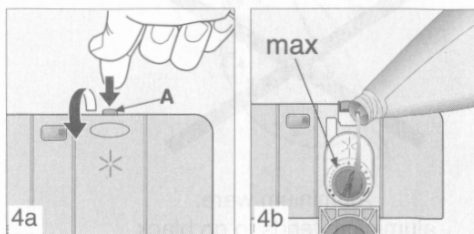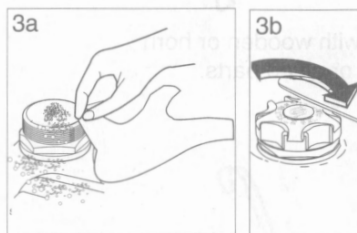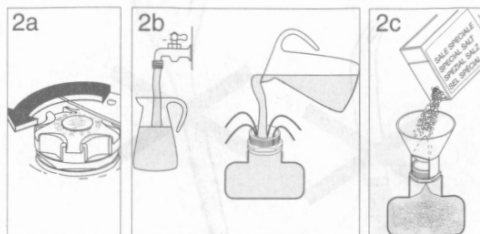


Items not suitable for dishwasher

  The following items should not be washed in the dishwasher :

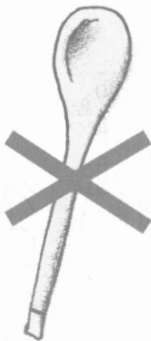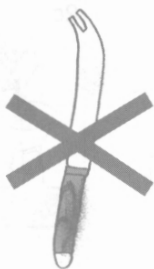

 
Cutlery with wooden or horn handles or glued parts.

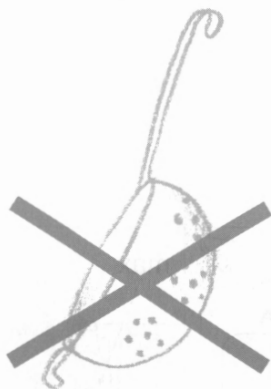


Aluminium ware:
aluminium tends to go black.



 Crystal ware not guaranteed dishwasher safe (unless a specific washing programme is available).

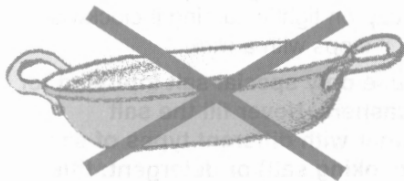

Copper ware:
copper tends to stain.

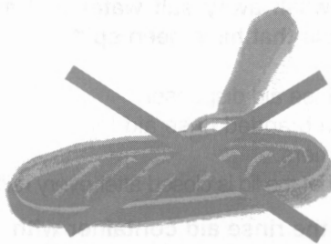 

Iron and cast iron objects can rust and stain other items.

Certain types of glass can become opaque after being washed several times in a dishwasher.

A chemical reaction can occur between silver cutlery and stainless steel cutlery. As precaution, do not wash together.

Certain types of decoration can discolour when washed in a dishwasher.

Important!

When buying new dishes, ensure that they are dishwasher safe.

In daily use

Before loading the dishes, you should:

- remove any scraps of food
- soften remnants of burnt food in pans.

When loading the dishes and cutlery, please note:

- load hollow items such as cups, glasses, pans, etc. with the opening downwards so that water cannot collect in the container or a deep base.
- Arrange items so that water can reach all surfaces.
- Long and/or sharp items of cutlery such as carving knives must be placed horizontally in the upper basket or in the removable knife basket (if supplied with your model).
- Light items (plastic bowls etc.) must be loaded in the upper basket and arranged so they do not move.

Attention!

Before closing the door, ensure that the spray arms can rotate freely.

Only use detergents specifically designed for use in dishwasher.

 
 
 
 
Add the powder detergents or place the detergent tablets inside the detergent dispenser. Please observe the manufacturer's dosing and storage recommendations as stated on the detergent packaging.

For programmes with prewash, follow the instructions given in the instruction book.

According to the finish and drying results obtained, adjust the dose of rinse aid by means of the 6 position selector.

Increase the dose if there are drops of water or lime spots on the dishes after washing.

Reduce it if there are sticky whitish streaks on the dishes.

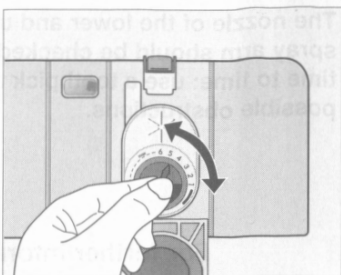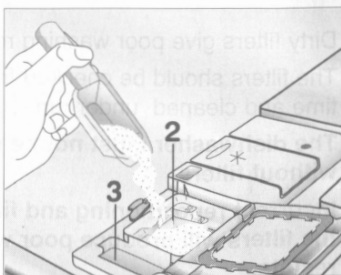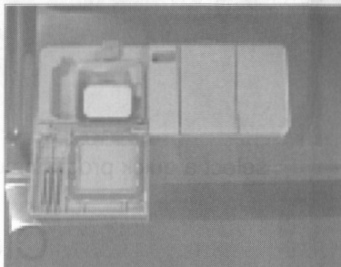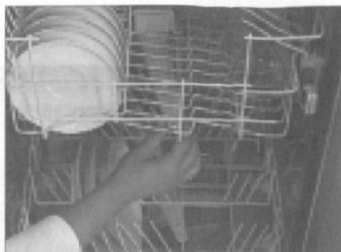

Selection of the washing programmes

If the dishes look like



select an intensive programme



select a
Normal 65° or Eco/Bio 50° programme



select a quick programme

The Eco/Bio 50° programme has been developed for the use with detergents which contain enzymes. These detergents achieve the same wash results, with a reduction in energy consumption, that would otherwise only be possible with 65°C programmes and conventional detergents.

To compensate the lower temperature, the duration of the programme has been extended.

Cleaning the filters

 
 
 
Dirty filters give poor washing results.

The filters should be checked from time to time and cleaned under running water.

The dishwasher must not be used without filters.

Incorrect repositioning and fitting of the filters will produce poor washing results.

The nozzle of the lower and upper spray arm should be checked from time to time: use a toothpick to remove possible obstructions.

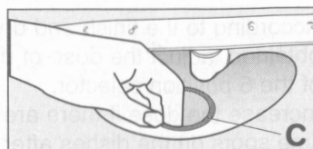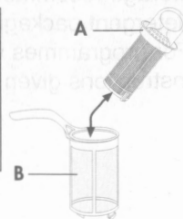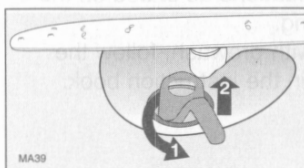

For further information, please read the instruction book