
Quick start

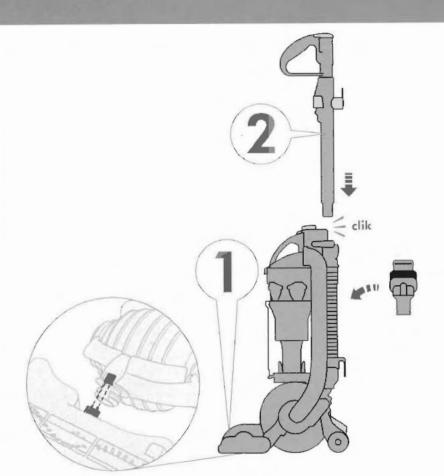







Using your Dyson cleaner


High-reach cleaning

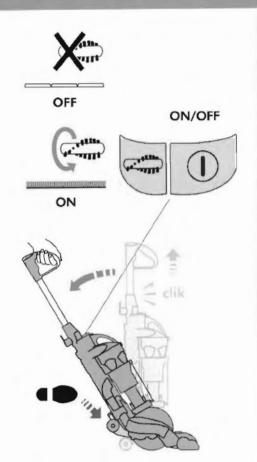

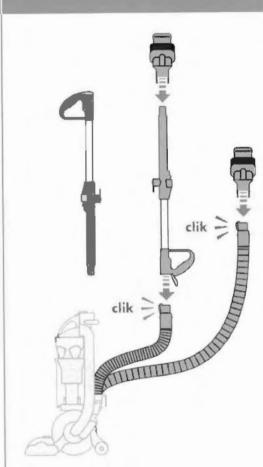


Clear bin™ emptying



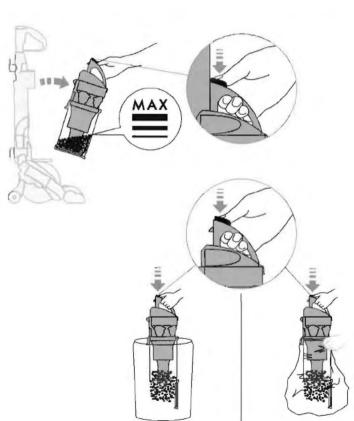



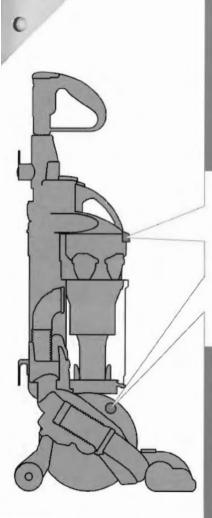



REMEMBER

Wash filters (A) and (B) with cold water at least every month.

IMPORTANT!

Refer to user manual for washing instructions.

Free filter wash reminder service: www.dyson.co.uk/filterwash